



How Surge-X™ Protection Works

NEW FRONTIER ELECTRONICS
 2744 NORTH SUGAN ROAD
 NEW HOPE, PA 18938

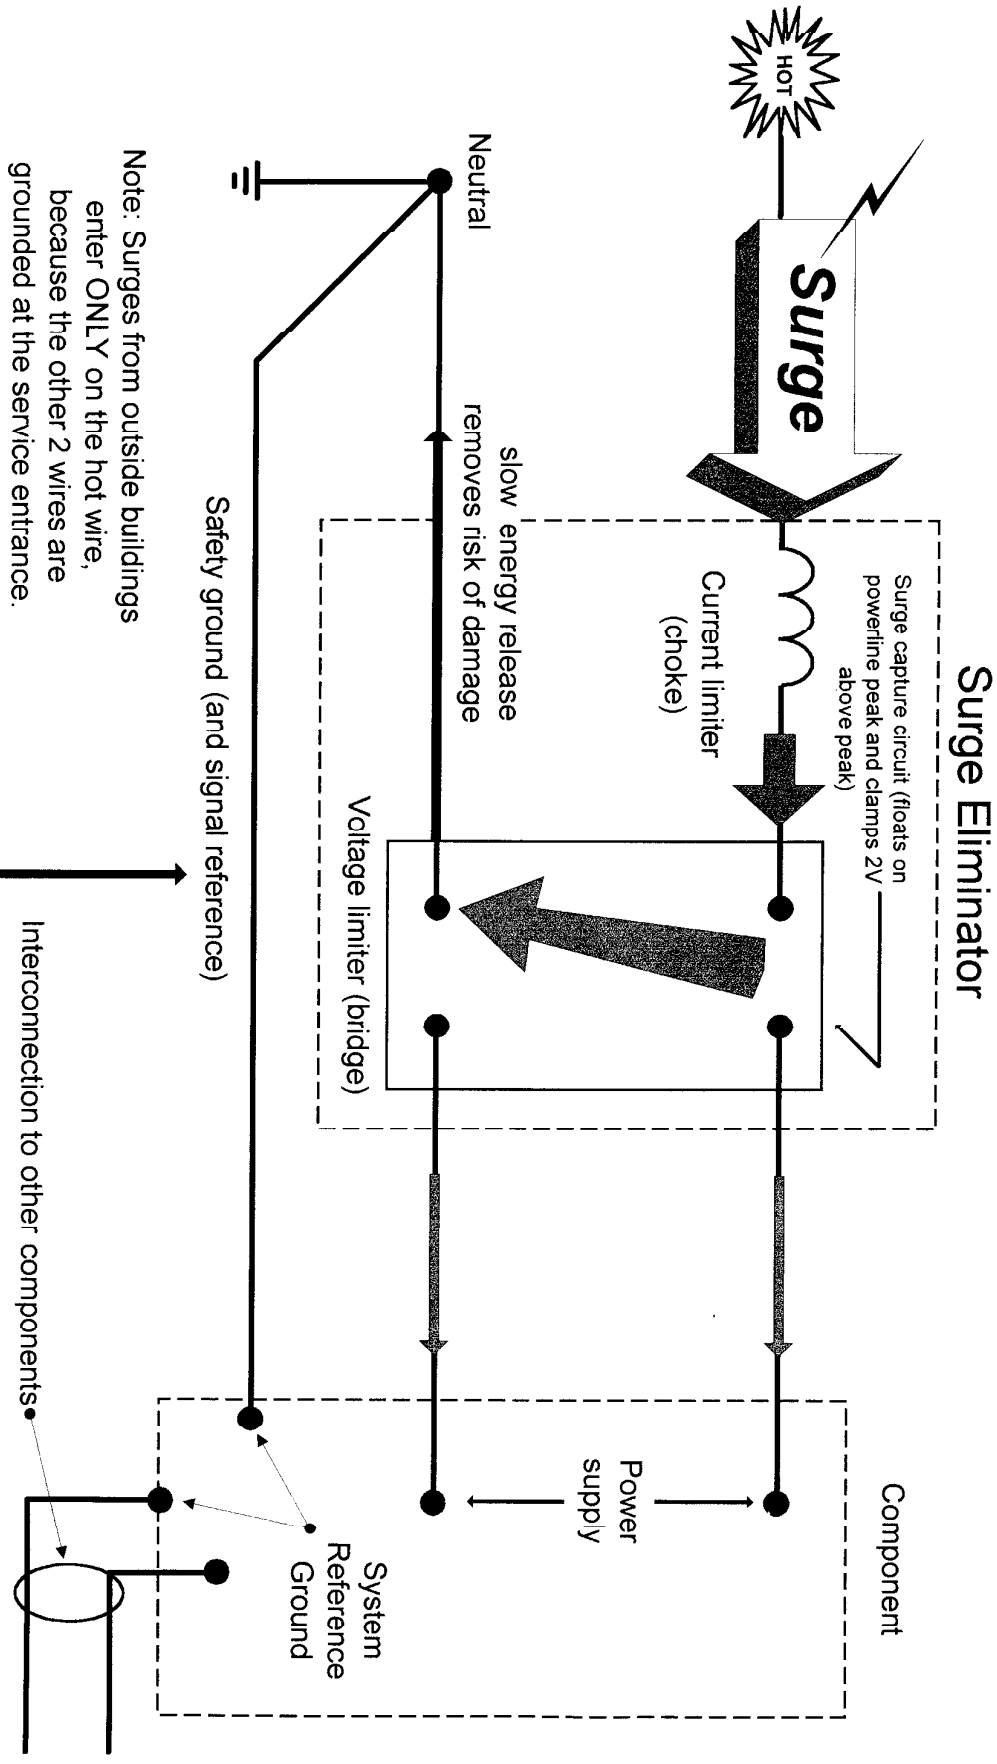

Note: Surges from outside buildings enter **ONLY** on the hot wire, because the other 2 wires are grounded at the service entrance.

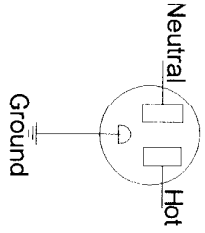

Important: Surge-X does not allow powerline surges onto the critical signal reference ground, which would pass them directly into delicate circuitry. All "3 mode" suppressors and UPSes do.